

Wiring Diagram:Wall Box W-R, Populus X-1-A, Reader O-1-A

This connection is only possible if you connect the Populus directly to the LAN.

